Assistant's Unit Installation
[Console Mounted]

Parts Bag Contents

T-Fitting w/tubing 1
Screw 3
Set Screw 3
Sleeve Cap (red) 1
Toggle Cap (black) 1
Water Q.D. Coupling ... 1

Special Tools

Level

CE 0088

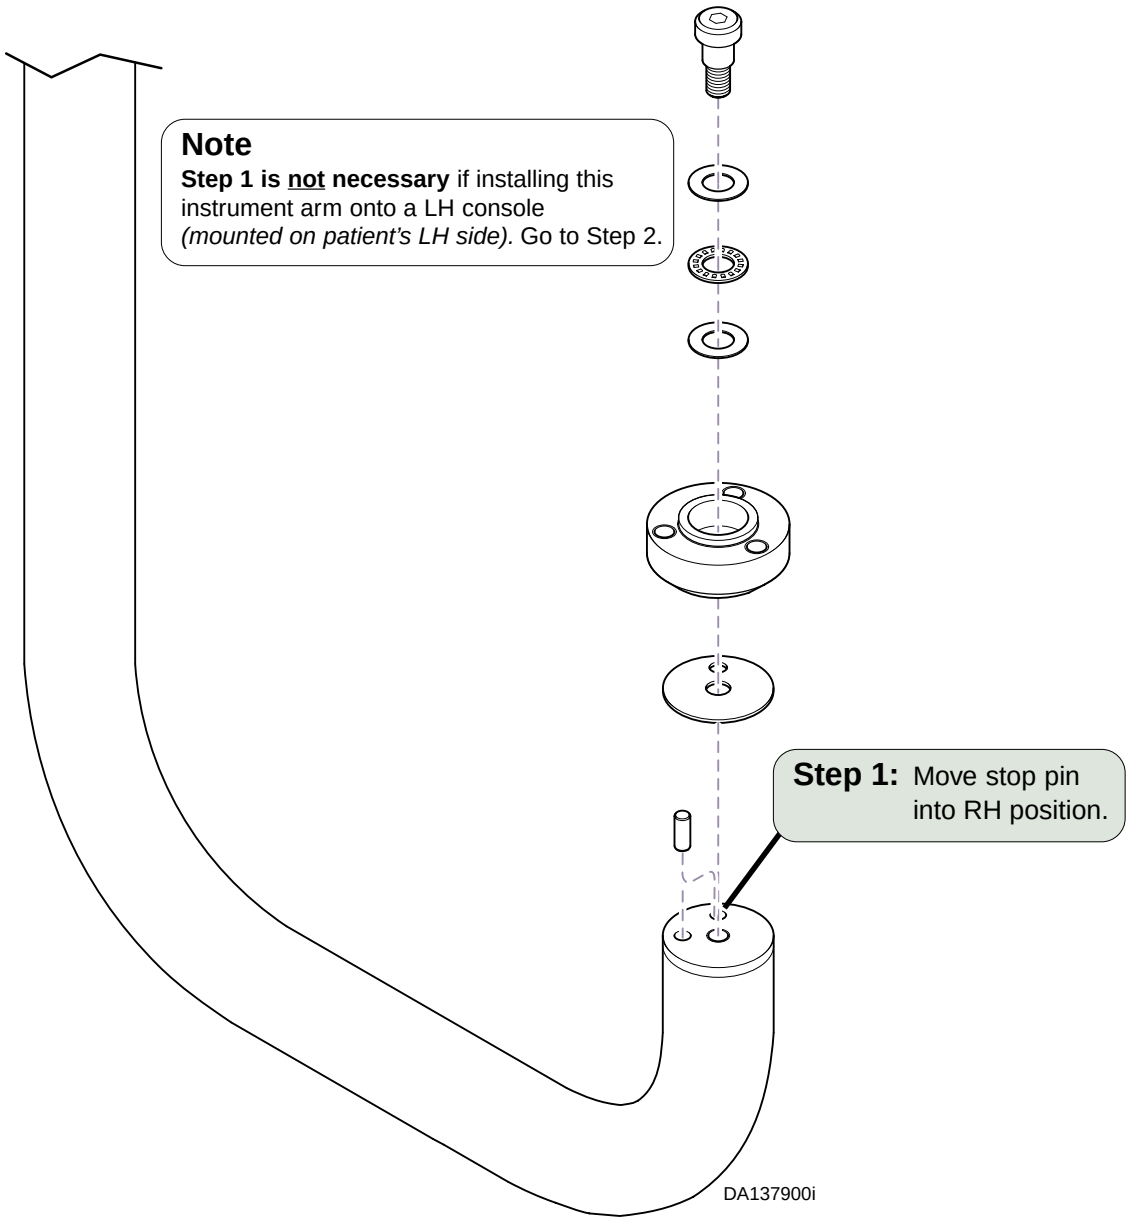
Note
Step 1 is not necessary if installing this instrument arm onto a LH console *(mounted on patient's LH side).* Go to Step 2.
Step 1: Move stop pin into RH position.
DA137900i

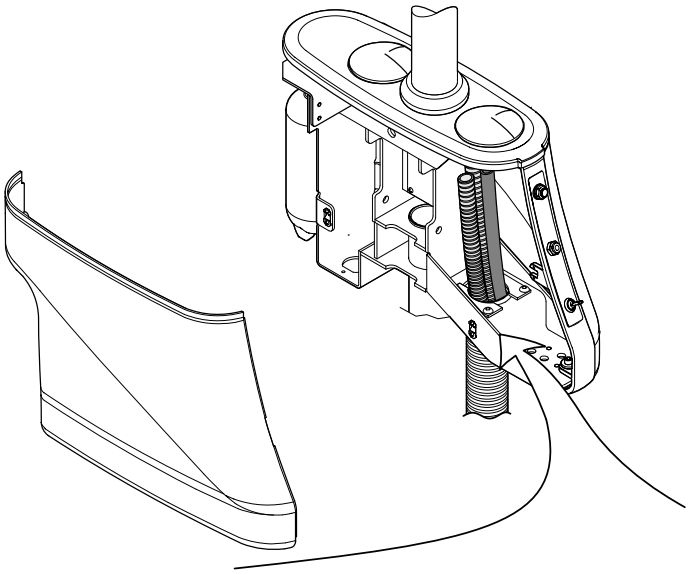

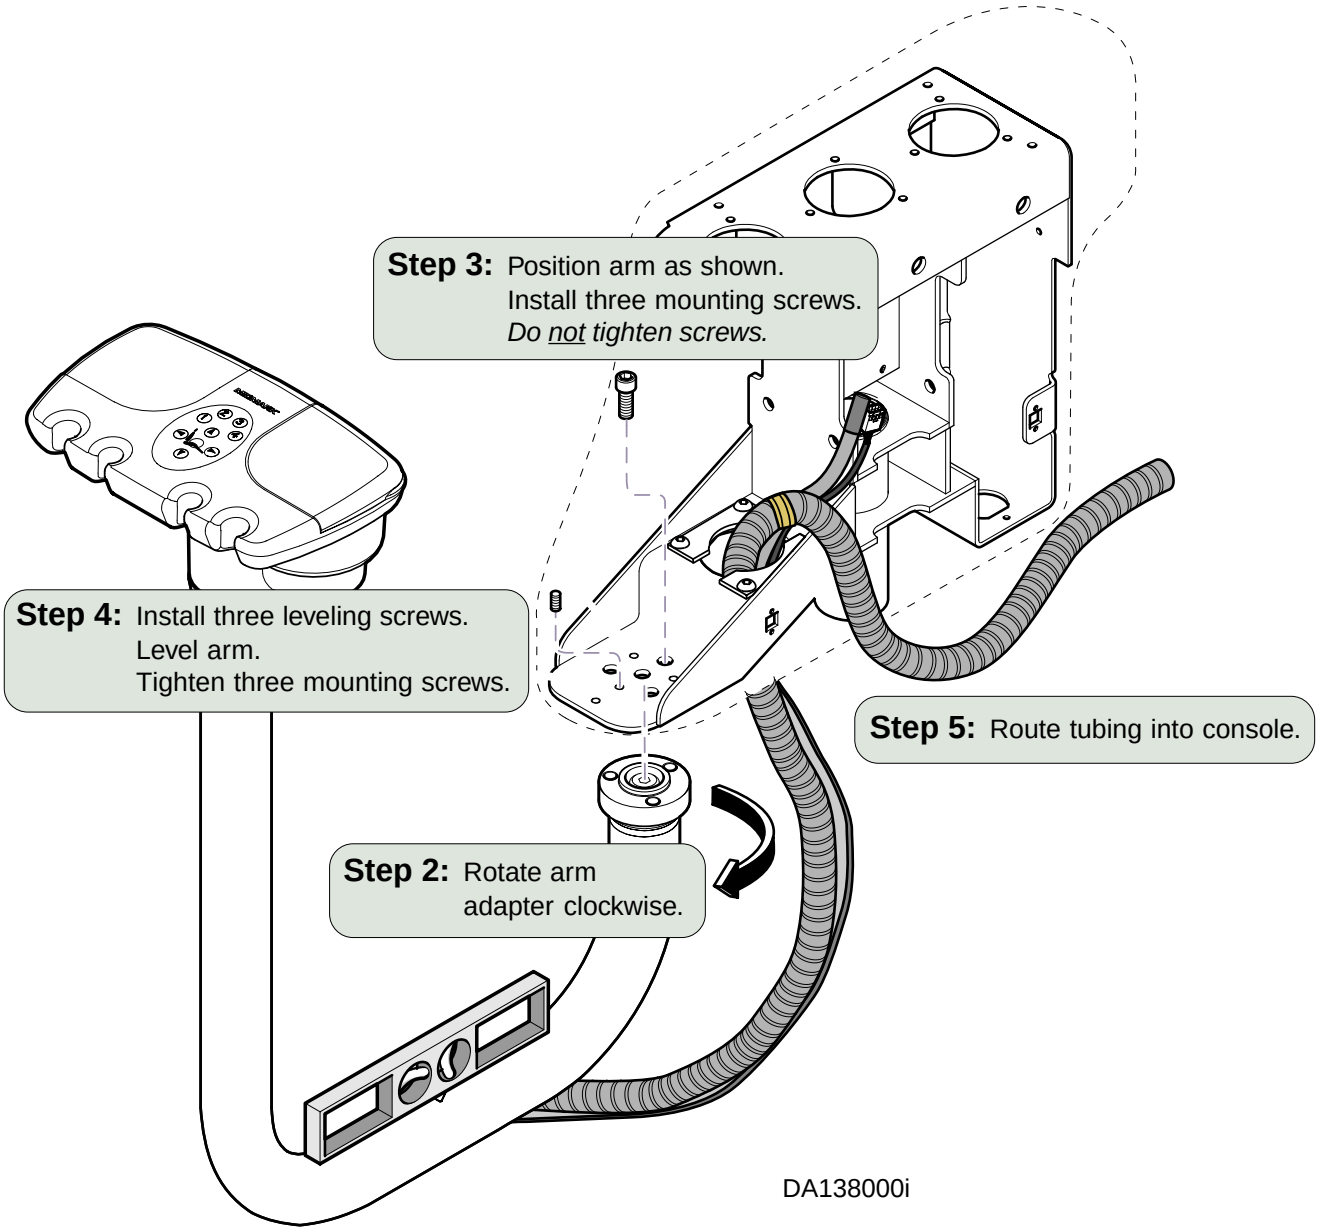
Step 3: Position arm as shown.
Install three mounting screws.
Do not tighten screws.
Step 4: Install three leveling screws.
Level arm.
Tighten three mounting screws.
Step 5: Route tubing into console.
Step 2: Rotate arm
adapter clockwise.
DA138000i

© Midmark Corporation 2003

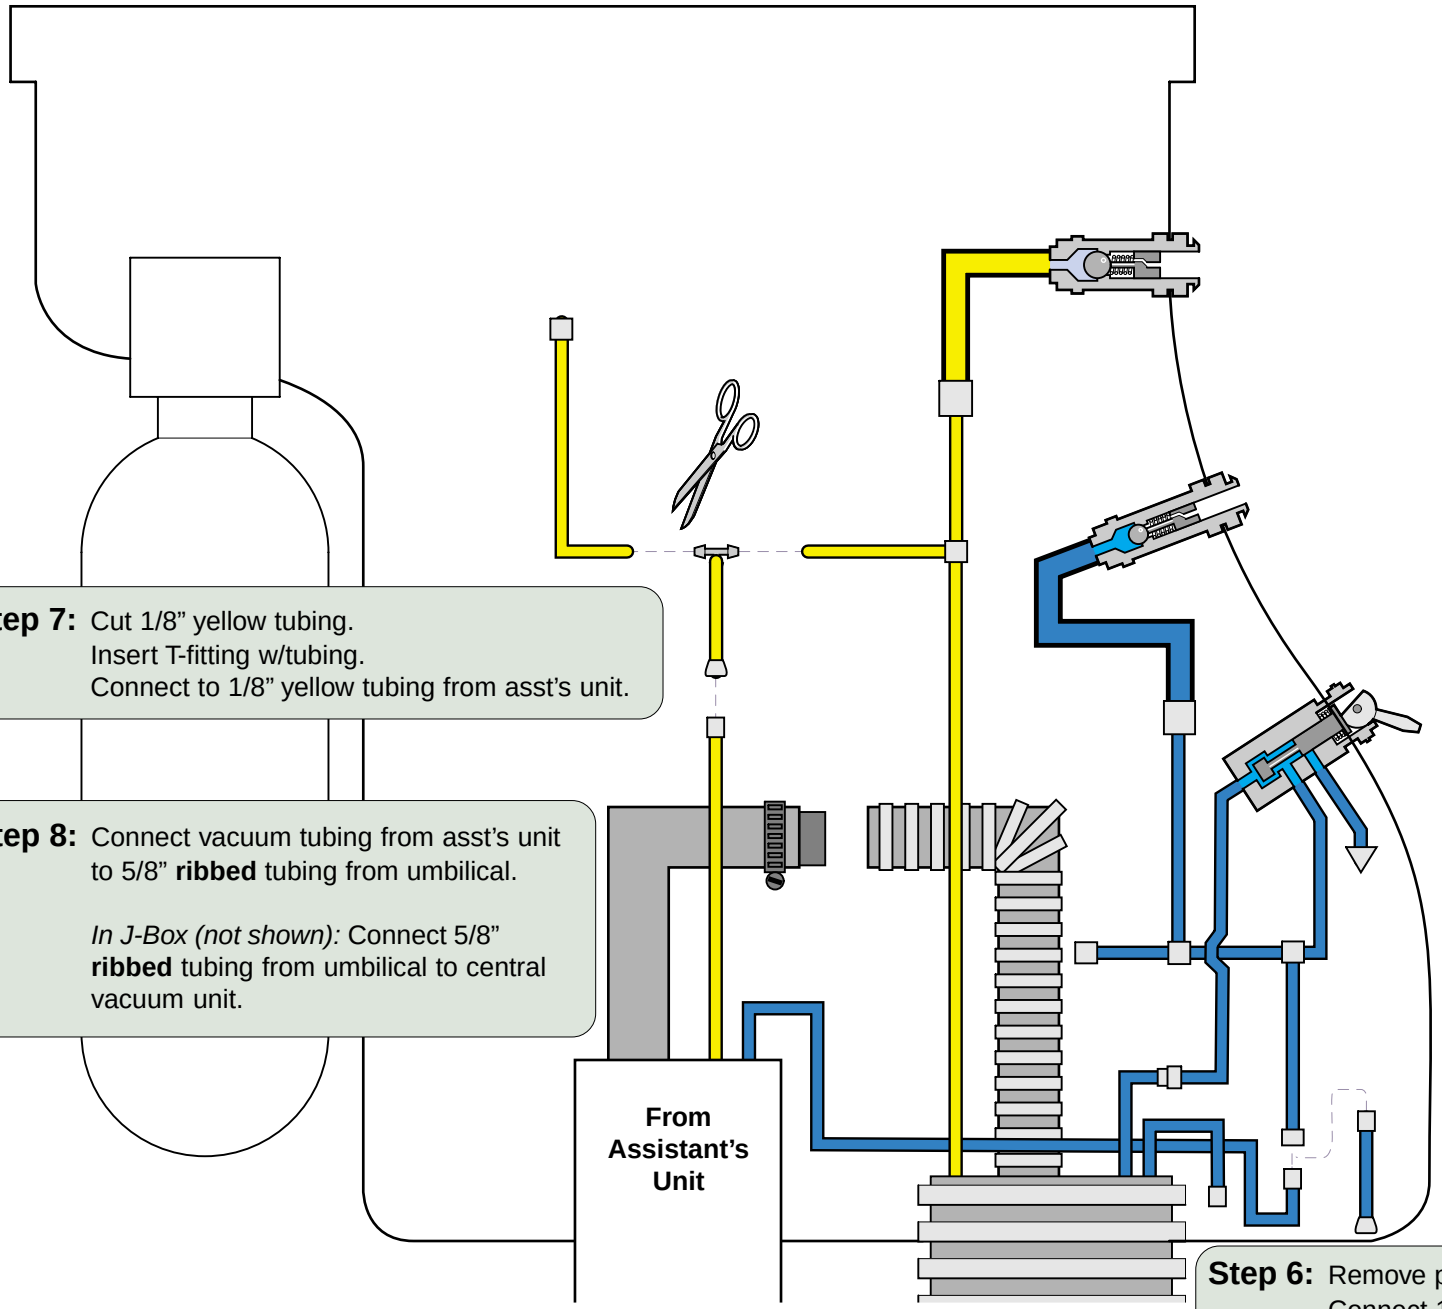

Step 7: Cut 1/8" yellow tubing.
Insert T-fitting w/tubing.
Connect to 1/8" yellow tubing from asst's unit.

Step 8: Connect vacuum tubing from asst's unit to 5/8" **ribbed** tubing from umbilical.

In J-Box (not shown): Connect 5/8" **ribbed** tubing from umbilical to central vacuum unit.

Step 6: Remove plugged section of 1/8" blue tubing.
Connect 1/8" blue tubing from asst's unit.

Back

Accessories

Step 10: Connect nine wires from accessory wire harness to J1 terminals on PC Board as shown.

Tip: *Lift lever, then insert wire.*
Push lever down to lock wire in place.

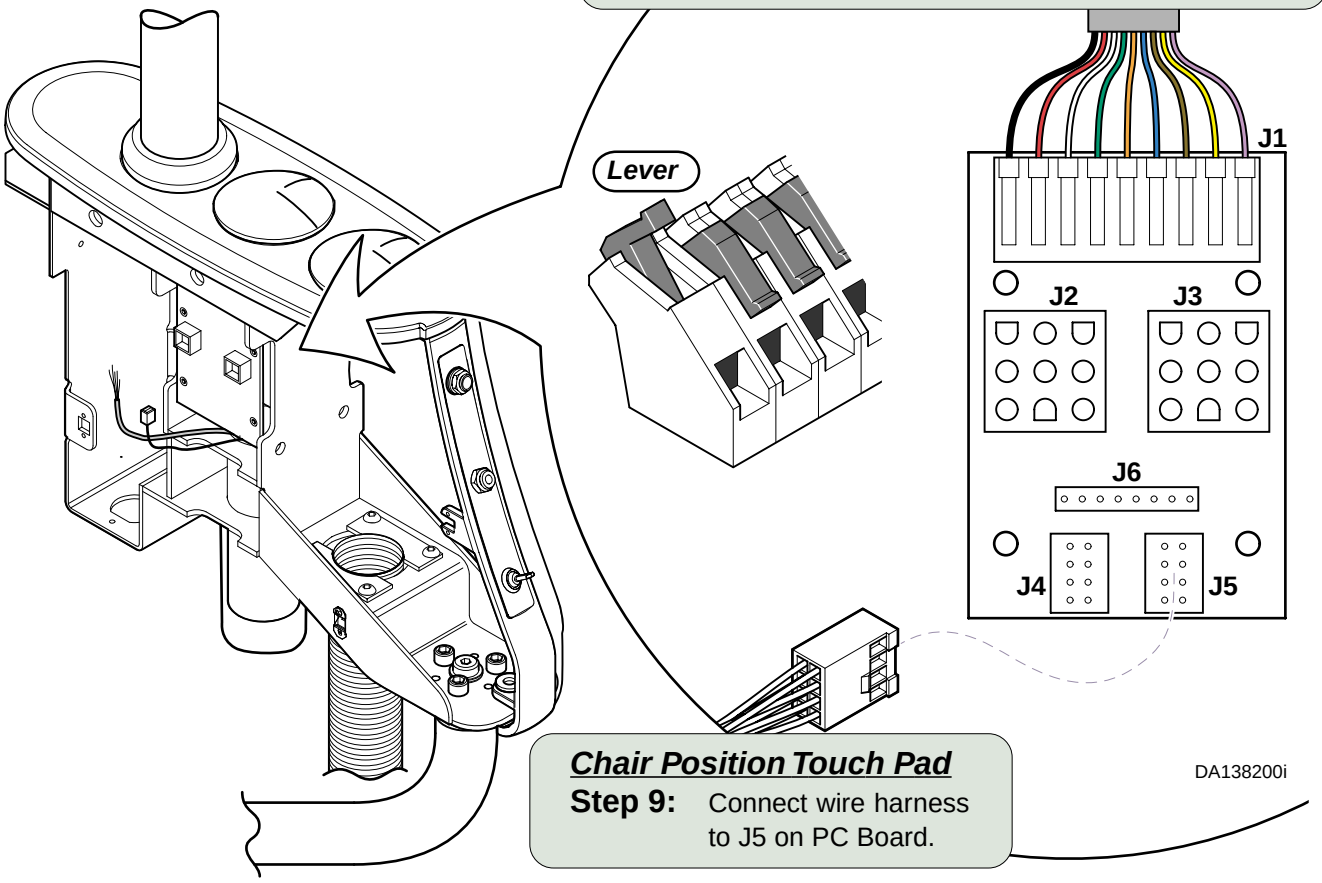

Chair Position Touch Pad

Step 9: Connect wire harness to J5 on PC Board.

Midmark Corporation
60 Vista Drive
P.O. Box 286
Versailles, OH 45380-0286
937-526-3662
Fax 937-526-5542
www.midmark.com

Because we care.

© Midmark Corporation 2003